



INSTALL INSTRUCTIONS

VAQUERO REAR BUMPER

Product Range : 315VRXX

Application : 2015 + CHEVROLET 2500,3500

I WARNING

Read the instructions completely before beginning installation. Before tightening bolts, drilling or cutting where required, check to make sure there are no obstructions such as brake, fuel or electrical lines which may be damaged. Also keep in mind this is an after-market product and MAY require minor shimming and/or trimming, reaming, etc. for proper fit. Road Armor is not responsible for any damages to vehicle.

ⓘ IMPORTANT NOTICE

- Be sure to inspect and test fit your product to ensure proper fitment before having it coated, painted, bed lined, etc.
- Road Armor will not be responsible for the cost of coating your unit if any problems with fit or finish are not noted and addressed beforehand.

SAFETY FIRST!

- FOLLOW ALL INSTRUCTIONS, YOUR SAFETY AND THE SAFETY OF OTHERS IS MOST IMPORTANT.
- WEAR APPROPRIATE EYE PROTECTION AND EXERCISE CAUTION WHEN DRILLING / CUTTING


REQUIRED TOOLS

SAE & Metric Sockets and Wrenches





Tape Measure

INCLUDED HARDWARE

- 12 1.5" SINGLE BOLT TAB (ZINC)
- 12 1/2" Flat Washer
- 12 1/2" Split Lock Washer
- 12 1/2"-13 Grade 8 Hex Nut
- 4 1.093 Dome Plug
- 4 7/16" Bolt
- 8 7/16" Washers
- 4 7/16" Nuts

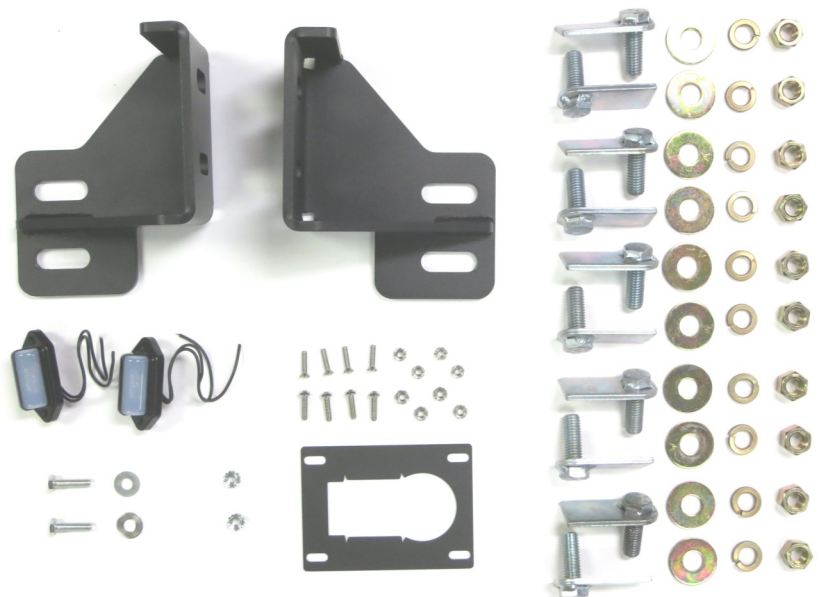

- 1 Remove sensors, trailer plug, and license
- 2 Remove Factory Bumper
- 3 Install trailer plug into mounting plate and then install onto bumper
- 4 Install license plate lights and sensors using

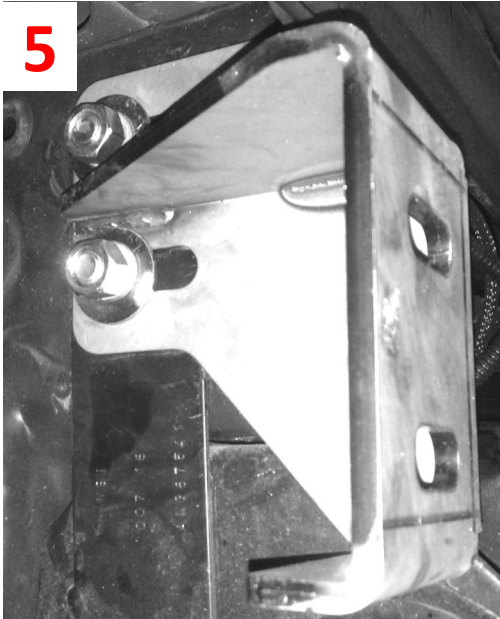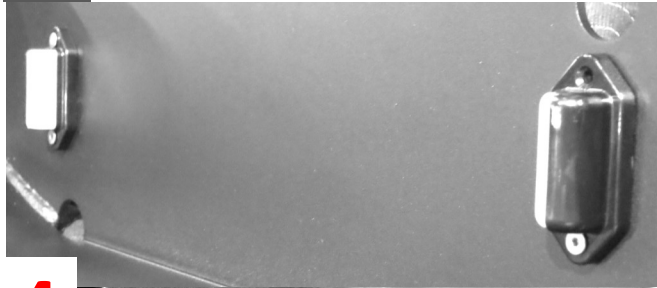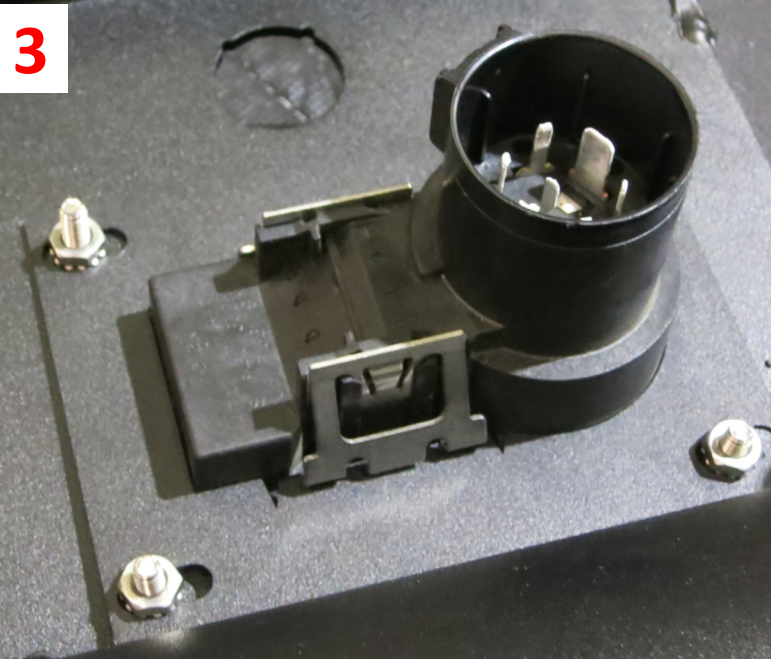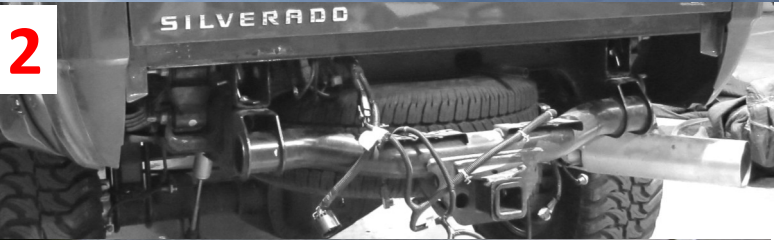

- 5 Install bumper brackets onto the frame using supplied hardware
- 6 Install bumper using supplied hardware. Do not fully tighten until you are satisfied with reveal.
- 7 Remember to reconnect the trailer plug, and the license plate lights



Finished!

