

2003-2005 DODGE 2500-3500

FRONT BUMPER INSTALLATION INSTRUCTIONS



SAFETY

Know safety, no injury. Know injury, no safety. ~Author Unknown

- **READ ALL SAFETY INSTRUCTIONS BEFORE INSTALLATION**
 - FOLLOW ALL INSTRUCTIONS FOR PROPER ASSEMBLY
 - WEAR APPROPRIATE EYE PROTECTION
 - EXERCISE CARE WHEN LIFTING COMPONENTS
 - USE APPROPRIATE TORQUE FOR BOLTS
 - BLUE THREAD LOCKING COMPOUND IS RECOMMENDED ON ALL BOLTS
 - CHECK TORQUE AFTER FIRST 100 MILES



2003-2005 DODGE 2500 FRONT BUMPER

I. TOOL LIST

1. 18MM WRENCH
2. 10MM SOCKET
3. 3/4" SOCKET
4. 3/4" WRENCH

II. REMOVAL OF OEM BUMPER

1. (FOR DIESEL ONLY) REMOVE TWO 10 MM BOLTS HOLDING TOP OF INTERCOOLER. SEE FIGURE 1.

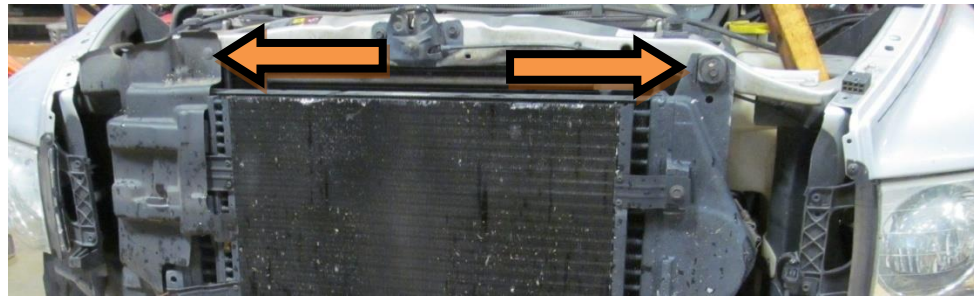


FIGURE 1:

2. DISCONNECT OEM FOG LIGHT WIRING HARNESS FROM DRIVER SIDE. SEE FIGURE 2



FIGURE 2



2003-2005 DODGE 2500 FRONT BUMPER

3. REMOVE TWO 18 MM NUTS THAT HOLD ON THE BOLT STRIP(BOTH SIDES)SEE FIGURE 3 AND FIGURE 4.(ON DIESEL CAREFULLY SLIDE INTERCOOLER AS FAR AWAY FROM EACH SIDE THAT IS BEING REMOVED)



FIGURE 3: POSITION OF BOLT STRIP ON PASSENGER SIDE



FIGURE 4

4. CAREFULLY REMOVE OEM BUMPER AND PLACE IN A SAFE LOCATION.
5. REINSTALL AND TIGHTEN TWO 10MM BOLTS HOLDING THE TOP OF INTERCOOLER



2003-2005 DODGE 2500 FRONT BUMPER

III. INSTALLATION OF HAMMERHEAD

1. POSITION FRAME MOUNTS AS SHOWN IN FIGURES 5,6, AND 7. AND TIGHTEN THE 2 18MM NUTS ON THE BOLT STRIPS (BOTH SIDES)



FIGURE 5: SIDE VIEW (DRIVER SIDE)



FIGURE 6: TOP VIEW (DRIVER SIDE)



2003-2005 DODGE 2500 FRONT BUMPER



FIGURE 7

2. ALIGN HAMMERHEAD BUMPER WITH FRAME MOUNTS AND TIGHTEN THE 4 BOLTS FROM HARDWARE KIT 1 INTO THE BUMPER MOUNT WITH A $\frac{3}{4}$ INCH WRENCH AND SOCKET.(BOTH SIDES)
2. USE HARDWARE KIT 3 FOR ANY FOG LIGHTS.



Congratulations!