


**07-14 Yukon, Yukon XL (1500) Grille Guard Installation Instructions.
Part # 200-30-7003**

Frame Horn Bracket

Passenger Driver



Bolt Bag Contents:	
Quantity	Description
12	1/2" X 1 3/4" Bolts
24	1/2" Flat Washers
12	1/2" Lock Washer
12	1/2" Hex Nuts
2	steel plate washers
2	Frame Horn Brackets
64	Total Pieces

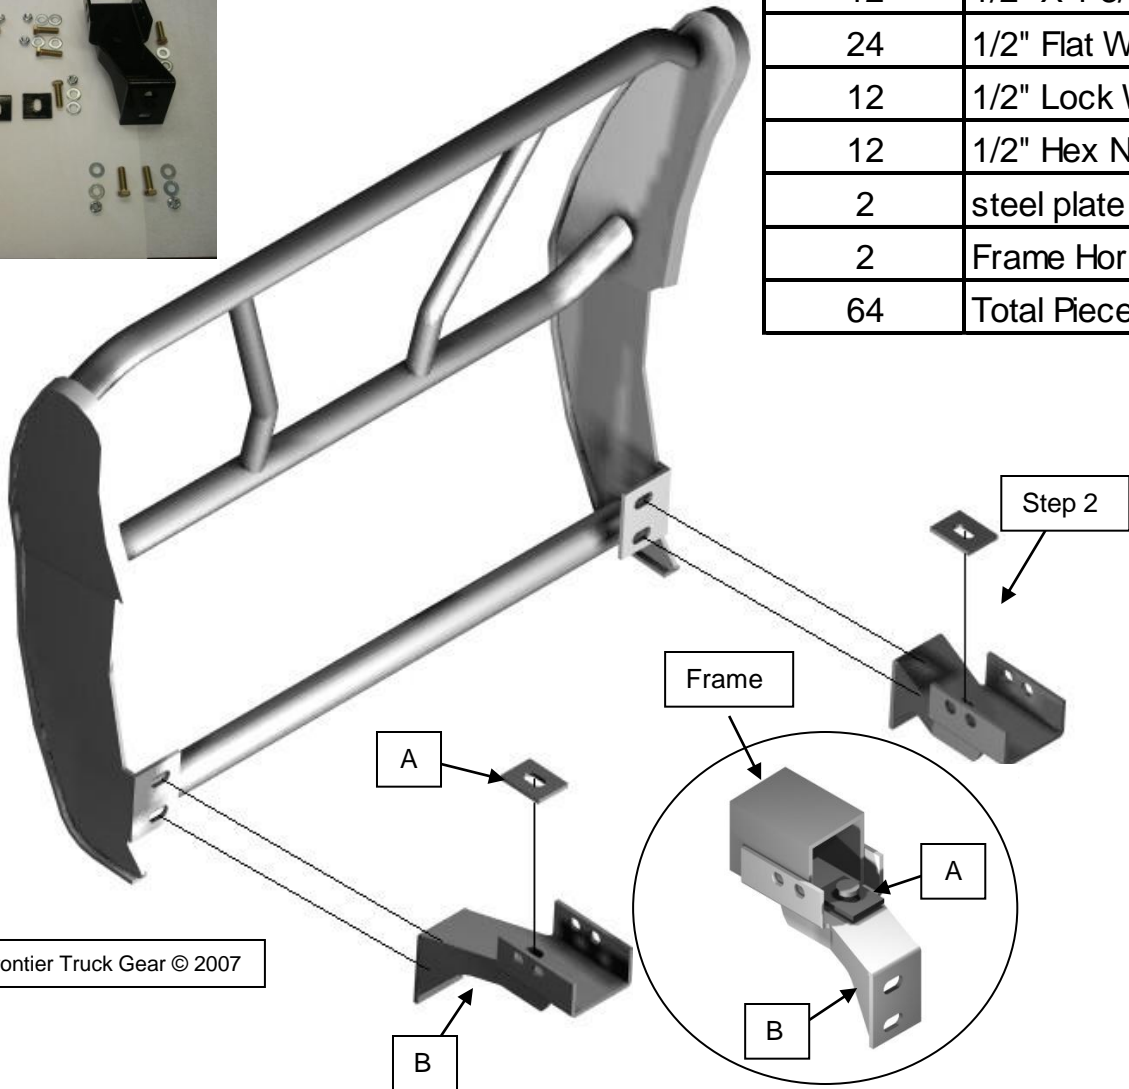

Frontier Truck Gear © 2007

Step 1: Remove factory tow hook if the truck has one. Mount Frame Horn Bracket as shown in the picture using the (3) tow hook bolt holes. ATTENTION: space is tight so work from the back to front when putting in bolts!!

Step 2: In order to secure bracket as tight as possible you must install our 1/2" bolt through the pre-punched hole on top of the bracket and squeeze bracket tightly to the tip of frame using the steel plate provided as a washer.

Step 3: Once brackets are tight to vehicle frame you can attach the Grille Guard feet to the brackets using the provided bolts.

Step 4: Check alignment of Grille Guard to truck before tightening bolts on the feet.