



Front Bumper

Part: JL01T



Fit: 2018 - Current

Jeep Wrangler JL



TO AVOID BEING SCRATCHED, PLEASE PROTECT THE SURFACE OF THE FRONT BUMPER CAREFULLY.



REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.



READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.



PLEASE USE SAFETY GLASSES & ENSURE TO BLOCK VEHICLE MOVEMENT DURING INSTALLATION PROCESS



60-180 min



Cutting Not Required



Drilling Not Required



support@trailfx.com



1 866 638 4870



WARRANTY
POLISHED STAINLESS STEEL – LIMITED LIFETIME
POWDER COATED BLACK – 3 YEARS

PARTS LIST

Qty	Part Description	Qty	Part Description
2	M12x35 Outer Hex Bolts	8	M12 Flat Washer
6	M12 Hex Nuts	8	M12 Spring Washer



INSTRUCTION PROCEDURE

1. Remove the factory front bumper from vehicle.
2. Position the TrailFX front bumper on the front of the vehicle. Line up the holes on the frame with the slotted holes on the bumper brackets. Attach the bumper to the frame using the supplied bolts.
3. Make sure all bolts are securely tightened. Installation completed.



Remove the factory front bumper from vehicle.



Line up the holes on the frame with the slotted holes on the bumper brackets.


Mount the hoop to bumper with the supplied bolts.



Make sure all bolts are securely tightened.



- M12 Hex Bolts * 2
- M12 Spring washer * 8
- M12 Flat Washer * 8
- M12 Hex Nuts * 6

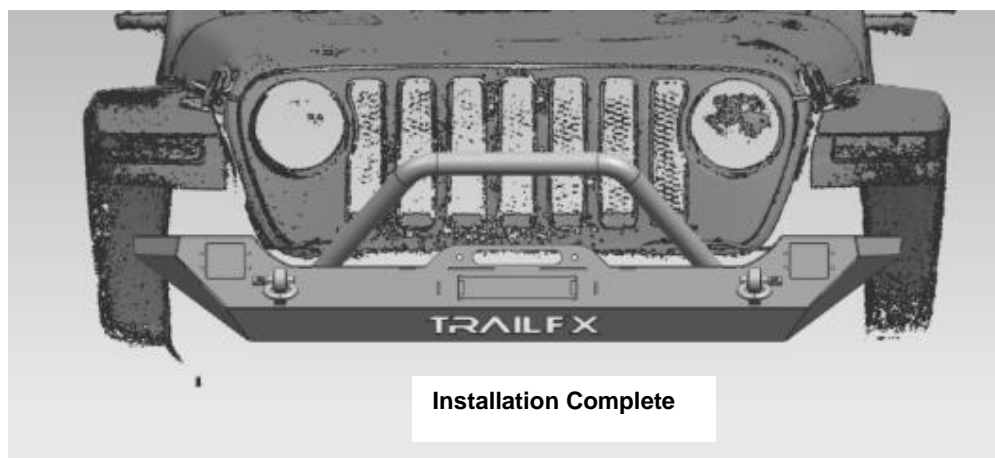

Installation Complete

PRODUCT CARE

1. Periodically check the product to ensure all fasteners are tight and components are intact.
2. Regular waxing is recommended to protect the finish of the product.
3. **Use ONLY Non-Abrasive automotive wax.** Use of any soap, polish or wax that contains an abrasive is detrimental and can scratch the finish leading to corrosion.
4. Aluminum polish may be used to polish small scratches and scuffs for **Stainless Steel finish.**
5. Mild soap may be used to clean the product for both **Stainless Steel and Black finish.**

FAQ's

1. **Mounting bracket are not getting installed properly.**
In some cases illustration images shown in Installation manual may not be the exactly same as per actual vehicle images ,also if Driver / Passenger side mounting brackets are very identical in the design, suggest referring Parts Identification guide to avoid fitment issue.
2. **Products are thumping / rattling after installation.**
Please ensure that all required mounting brackets / hardware's are installed & tighten correctly. Suggest using white lithium / regular grease between the metal to metal contact surfaces.
3. **Missing / Excess Hardware.**
Recheck hardware count as per the part list.
4. **Product not installing properly.**
Ensure make model year, cab length and bed size of your vehicle is listed in the application. All installation steps are followed correctly.

Check out these other TrailFX Products!!

www.TrailFX.com



Keystone Automotive Operations Inc. (KAO) warrants this product to be free of defects in material and workmanship at the time of purchase by the original retail consumer. KAO disclaims any other warranties, express or implied, including the warranty of fitness for a particular purpose or an intended use. If the product is found to be defective, KAO may replace or repair the product at our option, when the product is returned prepaid, with proof of purchase. Alteration to, improper installation, or misuse of this product voids the warranty. KAO's liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for any incidental or consequential loss or damage.